


ASSEMBLY INSTRUCTIONS

ARMY SCOOT

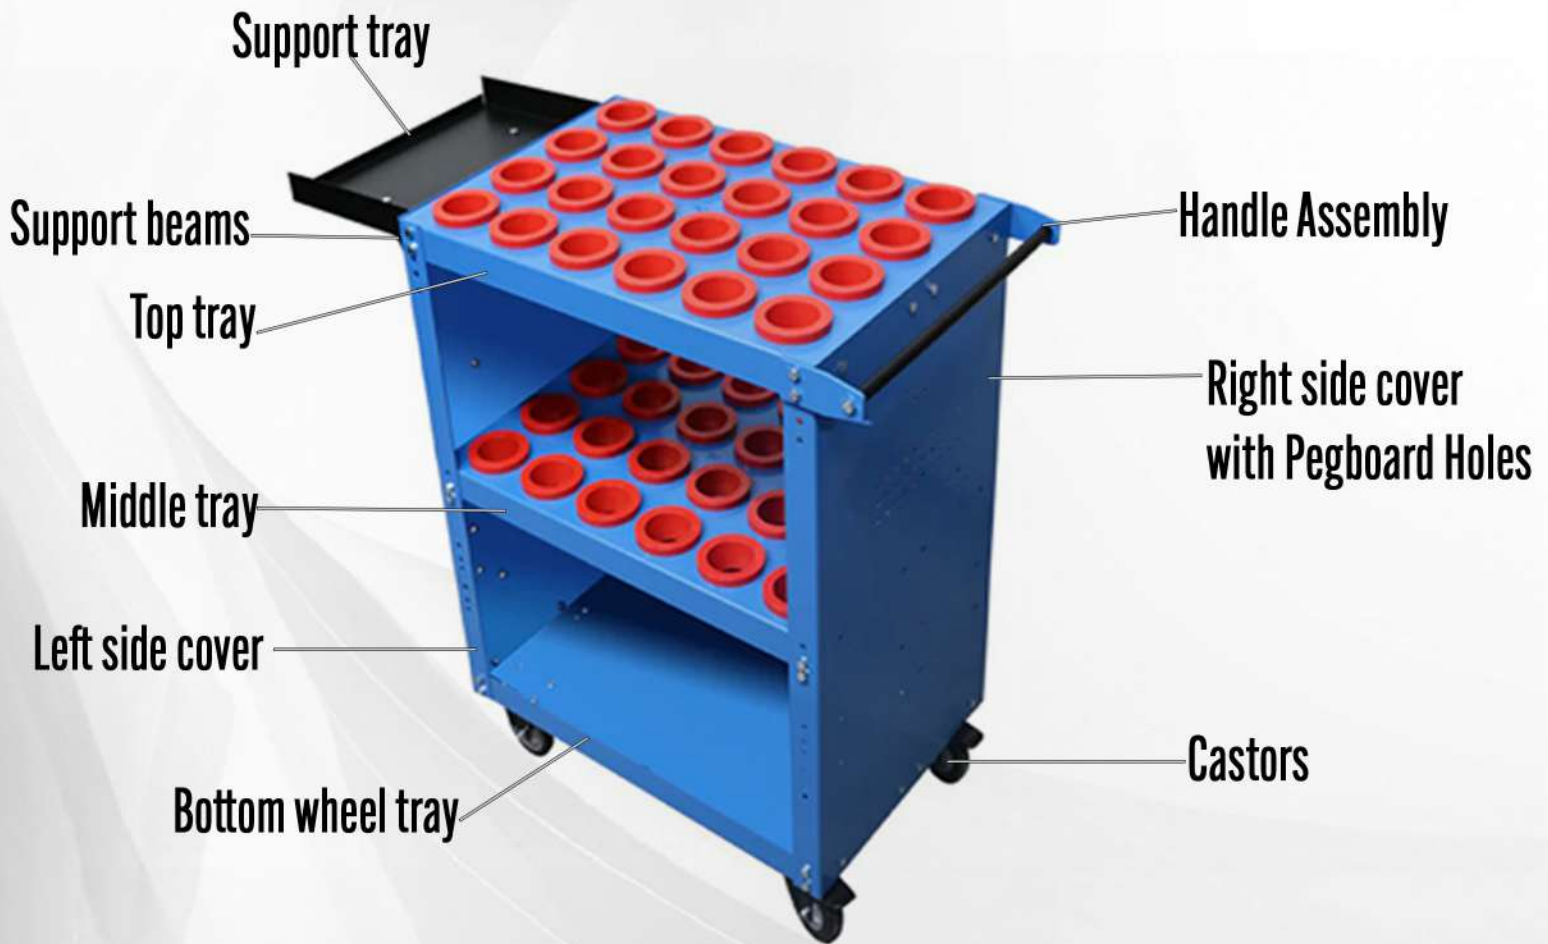

- 1) Attach the castors to the bottom wheel tray, but do not fully tighten them at this stage.
- 2) Secure the right and left side covers to the bottom wheel tray.
- 3) Install the middle tray onto the frame.
- 4) Position and secure the top tray.
- 5) Assemble and attach the handle assembly.
- 6) Install the support beams, followed by the support tray on top.
- 7) Tighten all nuts and bolts to secure the assembly.